Vaporella®

Forever Star

POLTI®

INNOVATIVE BY NATURE.

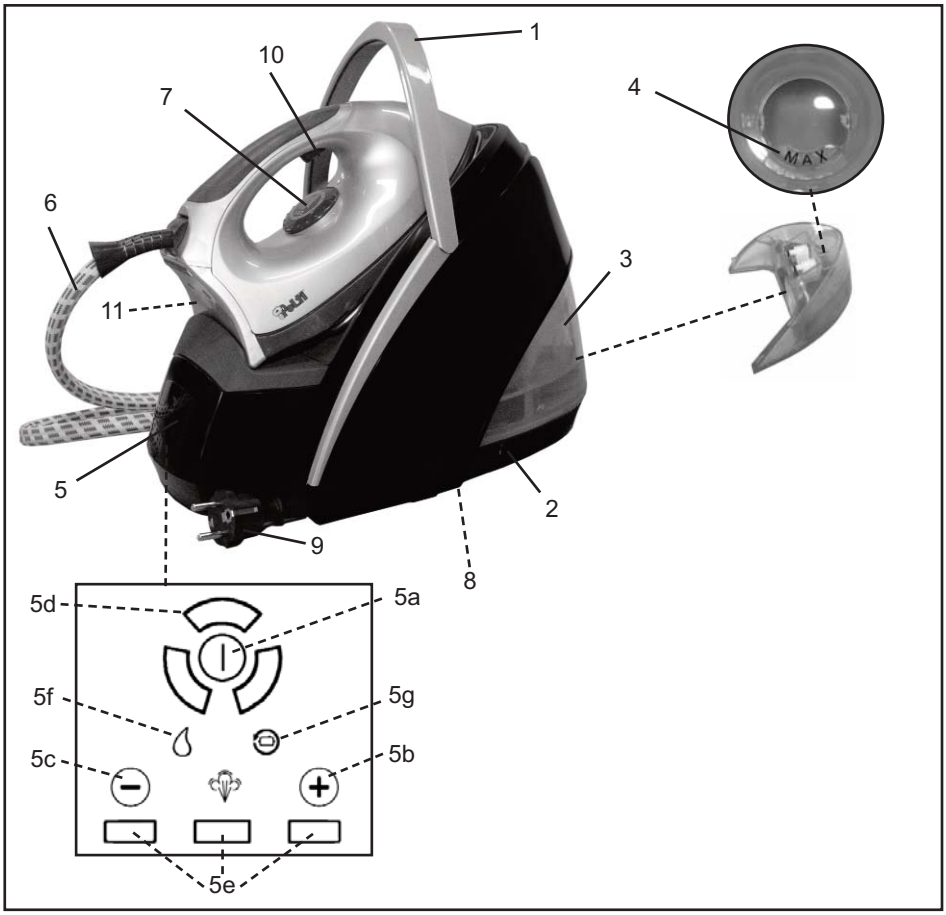
1
10
7
6
11
5
9
8
2
3
4
MAX
5d
5a
5f
5g
5c
5b
5e

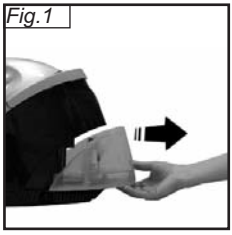
Fig.1

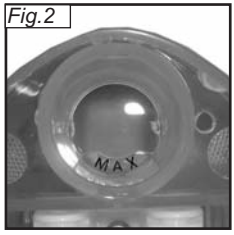
Fig.2
MAX

Fig.3

Fig.4

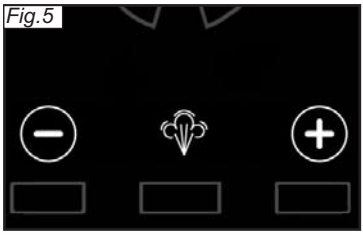
Fig.5

Fig.6

Read these instructions carefully before using the appliance.

Dear Custumer

Thank you for your confidence in buying this Polti product for perfect ironing in less time. Your Vaporella has been designed to ensure maximum ironing comfort; its quality materials make it a reliable work-mate.

The powerful jet of Vaporella steam acts on the fabrics eliminating every crease. Therefore it is not necessary to press on or iron repeatedly. Just let the iron slide over the garment to obtain perfect ironing, saving time and effort.

The innovative electronic boiler management system makes it possible to keep steam pressure constant for maximum efficacy during ironing. The control panel with touch sensors makes it possible to rapidly manage all product functions including the revolutionary Auto-Kalstop function for automatic notification when it is time to add Kalstop to the water tank.

With Vaporella it is possible to iron vertically to revive fabrics and take out bad smells from jackets, clothes and overcoats.

Thanks to its self-refilling system, Vaporella is quickly ready for use and does not need any interruption to your ironing for refilling the boiler.

LEGEND

1) Carry handle
2) Main switch
3) Tank
4) MAX level
5) Command display
5a) Boiler on sensor
5b) More steam sensor
5c) Less steam sensor
5d) On/stand-by indicator
5e) Steam pressure indicators
5f) Low water level indicator
5g) Add Kalstop indicator
6) Steam hose sheath - Power cable
7) Iron temperature control
8) Cable winder
9) Power cable
10) Steam button
11) Iron heating indicator light

CE *This unit conforms with EC-directives 2004/108/CE (EMC) and 2006/95/CE (low voltage).*

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

PLEASE READ THE FOLLOWING BEFORE USE

KEEP THESE INSTRUCTIONS

- Read these instructions for use carefully before using the appliance.
- Use which does not comply with these instructions will invalidate the warranty.
- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance and that the power outlet is connected to earth
- Always turn off the appliance at the on/off switch before unplugging it.
- If the appliance is left unused, always disconnect it from the mains. Never leave the appliance unattended with the cable plugged into the mains.
- Always make sure the appliance is unplugged before performing maintenance work of any kind
- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts are damaged.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- If it is necessary to replace the power supply cable, please refer to the nearest Polti authorised service centre, since the use of a special tool is necessary.
- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near a bathtub, shower or container full of water
- Never immerse the appliance, the cable or the plugs in water or other liquids.
- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- Do not lay the hot appliance on surfaces sensitive to heat.
- Do not leave the appliance exposed to wind or rain.
- Do not place the appliance near a live element, an electric stove or any other source of heat.
- Do not expose the appliance to extreme temperatures
- Never let children or people who are not familiar with how the appliance works use it.
- Do not press the buttons hard or with a pointed object such as a pen.
- Always rest the appliance on a stable surface.
- In case of accidental fall of the appliance it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Service Centre.
- In order to avoid prejudicing the safety of the appliance, use only original spare parts and accessories approved by the manufacturer.
- Do not wind the power cable around the appliance, especially when the appliance is still hot.
- During refilling with water, switch off and disconnect the appliance from the mains.
- It is necessary to keep the unit in horizontal position during operation.
- Do not direct the steam jet on electrical and/or electronic appliances.
- Let the appliance cool down before cleaning it.
- Before storing the appliance make sure that it has completely cooled down.
- This appliances is equipped with safety devices which are to be replaced only by a suitably qualified technician.
- Do not direct the steam jet at people, animals or debris. **Danger of burns!**
- Never place your hands inside the jet of

steam. **Danger of burns!**
- Do not put any detergent or chemical substance in the boiler.
- **Never use distilled water or scented water.**
- If you iron sitting down, do not place your legs under the ironing board, the steam can cause burns.
- Iron only on heat resistant surfaces and on surfaces that allow the steam to escape e.g. mesh ironing boards.
- For iron rest replacement use only original spare parts.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, make sure that the surface on which the stand is placed is stable.
- Check that the continuous steam request button is switched off before connecting the appliance to the mains.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

CORRECT USE OF THE PRODUCT

This appliance is intended for home use as a steam generator as described and in accordance with the instructions provided in this manual.
Please read these instructions carefully and keep them, as you may find them useful in future.
Polti Spa declines liability for any damage or accident derived from any use of VAPORELLA which does not comply with the instructions contained in this booklet.

ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users

This product complies with EU Directive 2002/96/EC.

The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.
The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.
Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

IMPORTANT

Before leaving our factory all our products are rigorously tested. This is the reason why your VAPORELLA may contain some residual water in the boiler.

PREPARATION FOR USE

- Remove the tank (**3**) from the appliance, pulling it out as shown in fig.1.
- Fill the tank with water up to the MAX level (**4**) (fig.2). Never use distilled water or scented water.
- Connect the tank up to the appliance again, being careful to insert it correctly.
- Slowly pull out the power cable (**9**) to the desired length as shown in fig. 3.
- Plug the power cable into a suitable outlet, which must be grounded.
- Press the main switch (**2**); the on/stand-by indicator light (**5d**) will start flashing.
- To turn on the appliance, touch the boiler on sensor (**5a**); the first steam quantity indicator (**5e**) will start flashing and the iron heating indicator light will come on (**11**).
- The noise you hear when the appliance comes on and periodically during use is due to the water filling system.

INSTRUCTIONS FOR USE

Check the manufacturer's label on the garment, and interpret the symbol on the label as follows:

	Steam ironing allowed For dry ironing, set thermostat on •••
	Steam ironing allowed For dry ironing, set thermostat on ••
	Check the fabric's resistance to steam ironing or dry iron with thermostat set on •
	- do not iron - steam ironing or treatment not allowed

STEAM IRONING

Set iron temperature to the "COTTON - LINEN" position by turning the knob (**7**) (fig. 4).

- Touch the more steam sensor (**5b**) or the less steam sensor (**5c**) to adjust steam pressure to suit the fabric you are ironing. Touch sensor (**5b**) to increase steam pressure or touch sensor (**5c**) to decrease it (fig.5).

You may set steam intensity to 3 different levels:

- 1 indicator (**5e**) on:
  Light steam intensity, suitable for synthetic or delicate fabrics.
- 2 indicators (**5e**) on:
  Medium steam intensity, suitable for wool and fibres.
- 3 indicators (**5e**) on:
  Strong steam intensity, suitable for cotton, jeans and linen.
- Wait until the indicator (**5e**) stays on and the iron heating indicator light (**11**) goes off (about 3 minutes). An acoustic signal will sound when the appliance reaches the selected steam pressure. Press the button (**10**) on the iron to let steam out of the openings on the plate. Release the button to stop it.
  NOTE: The first time you use steam after turning on the iron or after not using steam for several minutes, a few drops of water may flow out of the plate because temperature has not yet stabilised. Direct the first jet of steam onto a clean cloth.

IRONING WITHOUT STEAM:

- To iron dry, without steam, set iron temperature by turning the knob (**7**) to the appropriate temperature for the fabric as shown on the knob. When ironing without steam, be careful not to press the steam button (**10**) as water may leak out of the plate.

NOTE:

- The iron heating indicator light (**11**) flashes on and off while you are using the iron. This indicates that the electric heating element is operating to keep plate temperature constant. Continue ironing, as this phenomenon is normal.

LOW WATER LEVEL

When there is no more water in the tank, the low water level indicator (**5f**) will come on and an acoustic signal will sound. To continue working, simply top up the water level in the tank as described in the section on preparation for use.

PUTTING AWAY THE APPLIANCE

Make sure the appliance has cooled down completely before putting it away. Tug on the power cable gently (**9**) until it clicks once, and then accompany it with your hand as it is automatically wound up by the cable winder (**8**). Carry the Vaporella by its convenient carry handle (**1**).

AUTO SHUT-OFF ENERGY-SAVING FUNCTION

If it is not used for 15 minutes, the appliance will automatically switch to stand-by mode. Touch the boiler on sensor to start it up again (**5a**).

AUTO-KALSTOP FUNCTION

Water naturally contains a certain amount of calcium and magnesium salts, which determine its hardness and cause lime scale to build up over time. To prevent his problem Polti has developed KALSTOP FP 2003 for natural prevention of lime scale build-up on steam cleaners and irons with separate boiler units.

To keep your boiler working properly and lengthen your Vaporella's useful lifespan, Polti has fitted Vaporella Star 2000 with the special Auto-Kalstop function which automatically indicates when you need to use Kalstop.

Whenever the Add Kalstop (**5g**) indicator light comes on:

- Turn off the appliance with the main switch (**2**);
- Remove the water tank (**3**) and fill it with water up to the MAX level (**4**);
- Pour the contents of one phial of Kalstop into the tank (**3**);
- Turn on the appliance using the main switch (**2**) and, while all the other indicator lights are on, reset the Add Kalstop indicator light by pressing sensors (**5b**) and (**5c**) and holding them down until all the indicator lights go off (fig. 6).
- You may now resume using the appliance as usual.

NOTE: When the Add Kalstop indicator light (5g) comes on, you can continue using the appliance, but adding Kalstop FP 2003 immediately will help keep your Vaporella in perfect working order for longer.

Constant use of Kalstop FP2003:

- prolongs your Vaporella's useful lifespan;
- improves steam quality;
- increases the boiler's efficiency and saves energy.

Kalstop FP2003 is an organic, biodegradable, non-toxic product; a tannic complex which prevents lime scale formation, reduces the presence of oxygen in the water (which corrodes metals) and protects the walls of the boiler.

KALSTOP FP 2003 is available for sale in packages of 20 phials from home appliance retailers and authorised Polti technical service centres. Use original Polti products only. Products by other brands may not be suitable for use in Polti appliances and could cause damage.

CARE OF YOUR VAPORELLA

- **Before attempting any maintenance operation, always disconnect the appliance from the mains.**
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents which may harm the body material.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The command display (5) is off.	Power cable not plugged in Main switch (2) off	Plug power cable into a suitable outlet. Turn on main switch (2).
The appliance is on but it is not producing steam	Water tank (3) is empty or not inserted correctly. The on/stand-by indicator light (5d) is flashing	Fill the water tank (3). Make sure the water tank is inserted correctly. The appliance is on stand-by; turn it on by touching the boiler on sensor (5a).
The low water level indicator (5f) stays on and an acoustic signal sounds	No water in boiler	Try turning the appliance off and turning it back on again with the main switch (2). If the problem persists, contact an authorised service centre.
The Add Kalstop indicator light (5g) stays on.	You need to add Kalstop The auto-Kalstop function has not been reset	Add Kalstop Reset the function. In both cases follow the instructions in the “AUTO-KALSTOP FUNCTION” section.